



DURAM
Rubber Products


The Duram Finger PULLER

A revolution in poultry picking

A pneumatic device designed to maximize efficiency and ease the difficult task of finger replacement involved in poultry picking. The Duram Finger Puller is safe and easy to operate. Compact, lightweight and portable.

Duram Finger Puller assures:

- Greater mobility
- Convenience
- Fitting all types of pickers
- Access to narrow spaces
- Elimination of wrist & palm pains from manual finger pulling
- Easy entry into the disc
- Use with either connected or separated discs or hubs, without any support tools or inconvenient slippery instruments

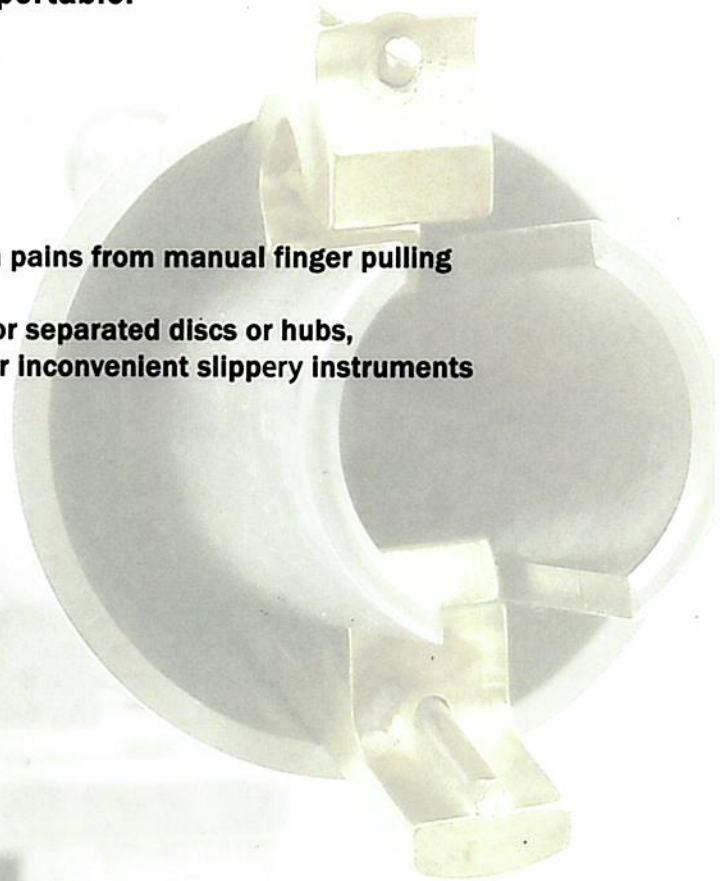


**Duram Finger Puller is a time & money saver
You will cover your expenses within months
by saving on replacement time**



FINGER PULLER

STEP-BY-STEP WITH DURAM

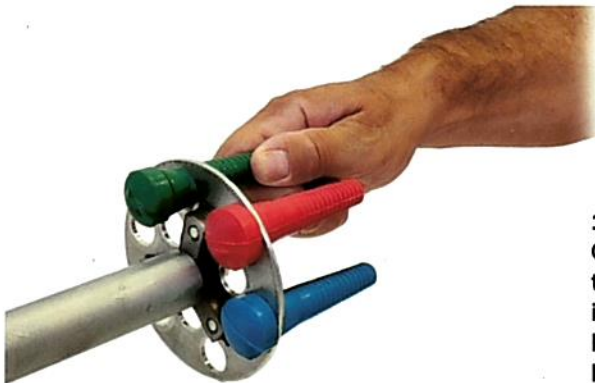

1. Prior to assembly, dip Duram fingers into soapy water. Once wet, manually place each finger into the disc in the regular system, pushing it in until it firmly sits in the disc.

NOTE: Do not spray with oil, grease or chemicals! It is strictly forbidden!



2. Place the Finger Puller on the finger. Make sure the finger sits inside the barrel, between the gripper teeth. Enter the finger as deep as possible into the barrel. Press the trigger button.

Note: recommended air pressure 5-8 bar



3. Once the trigger has been pressed, the finger should be firmly in place. If it is not, release the trigger, wait a second and pull again. The finger should now be in place. Release the trigger and proceed to the next finger.